


I have this image in here to show what the Mobo looks like after you take off the connector, as well as the A/B 1-25 traces.

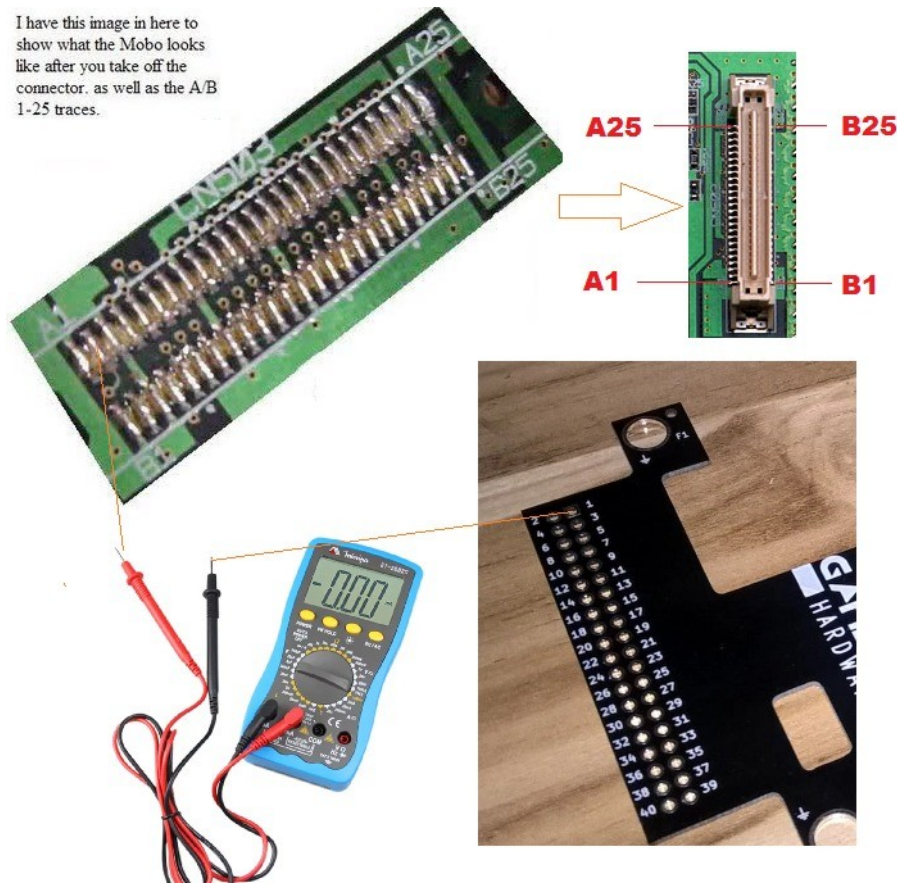

TEST POINT DIAGRAM FOR DREAM IDE REBORN

DREAM IDE REBORN	GD CONNECTOR	DREAM IDE REBORN	GD CONNECTOR
PIN 1	A2	PIN 21	A14
PIN 2	A8	PIN 22	A8(GND)
PIN 3	A4	PIN 23	B14
PIN 4	A5	PIN 24	A8(GND)
PIN 5	B4	PIN 25	A15
PIN 6	B5	PIN 26	A8(GND)
PIN 7	A6	PIN 27	B15
PIN 8	A7	PIN 28	NOT USED
PIN 9	B6	PIN 29	A16
PIN 10	B7	PIN 30	A8(GND)
PIN 11	A9	PIN 31	B16
PIN 12	A10	PIN 32	NOT USED
PIN 13	B9	PIN 33	B17
PIN 14	B10	PIN 34	NOT USED
PIN 15	A11	PIN 35	A19
PIN 16	A12	PIN 36	B19
PIN 17	B11	PIN 37	A20
PIN 18	B12	PIN 38	B20
PIN 19	A8 (GND)	PIN 39	ACTIVE LED
PIN 20	NOT USED	PIN 40	A8(GND)

Install videos: <https://www.youtube.com/watch?v=uYH3-GfKPnA>
<https://gametrackssite.wordpress.com/installation-2/>
https://www.youtube.com/watch?t=704s&v=G3A_vfEV9bg

Important: Make sure to **test all points before you solder** on the IDE header.
<https://www.youtube.com/watch?v=ByLmHR7sJak>

Hints: The GND points F1, F2 and F3 should be soldered to the motherboard.
 Also the hole in the case needs to be cut high enough to let the motherboard sit flat without forcing it downwards.